

Serial or Model Number
Date of Original Purchase
Contact Name
Address (City, St, Zip)
Phone Number
Email Address
Description of problem with the product

POV Action Video Cameras is a Blackbird Products Group brand.

www.blackbirdproducts.com



The consumer is responsible for all costs (shipping, insurance, travel time, etc.) in getting the product returned to POV Action Video Cameras. POV Action Video Cameras will, at its option, repair or replace on an exchange basis the defective unit, without charge for parts or labor. When warranty service involves the exchange of the product or of a part, the item replaced becomes POV Action Video Cameras property. The replacement unit may be new or refurbished to the POV Action Video Cameras high standard of quality; and at our option, the replacement may be another model of like kind and quality. POV Action Video Cameras' liability for replacement unit of the covered product will not exceed the original retail selling price of the covered product. Exchanged or replacement products or parts assume the remaining warranty period of the product covered by this limited warranty.

480P

Eyewear Video Recorder



PRO24 Series



USER MANUAL

32GB

TF Card
(not included)

AVI

Video format

63°


Photographing
Angle

480P@30

fps

1.What's included:

480P Eyewear Video Recorder
 USB Cable
 Carry case
 Cleaning cloth
 User manual

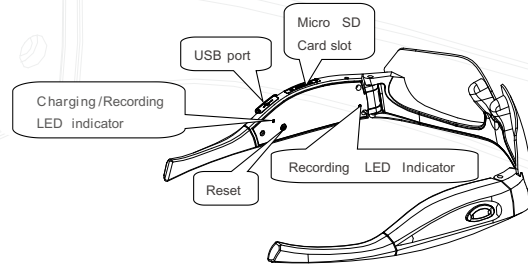


2.Charging

Fully charge the battery before first use. The charging steps are as follows:

- Please use the provided cable to connect the camera to a powered USB port or a power socket for charging. The Red LED indicator stays on while the camera is charging, the Red LED indicator will turn off and Green LED will stay on once the camera is fully charged.

3.Operation Instruction

- Button Instruction
 With only one Power ON/OFF button and one Reset button, the operation of this device is easy and convenient, the Button instructions as follows,

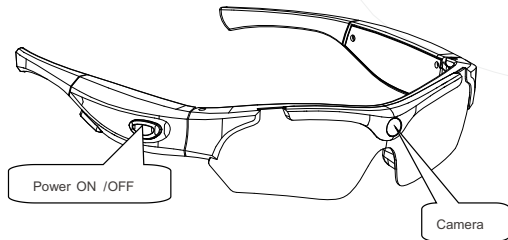

4.Power on & Start Recording:

Press the Power ON/OFF button for 2 seconds, both green and blue LED will be on, then the blue LED starts to flash, which indicates that the camera is recording.

5.Power off & stop Recording:

Press the Power ON/OFF button for 2 seconds to stop recording. Meantime, the camera will save the recording files and then turn off. If you don't stop the camera, it will keep recording and saving one video file every 20 minutes until the camera reaches low power or TF card is full.

6.Reset Button

If the camera is unresponsive push the RESET button and then restart the camera.

7.Data Transmission(File Download):

- Ensure your camera is in "power off" status with memory card still in the camera.
- Connect the camera with PC via USB 2.0 port using the provided cable.
- When prompted, select to download files from camera to PC or personal hard drive.
- To review files, locate and open the DCIM folder.
- Files can then be saved to the PC or personal hard drive.
- When finished saving the files to your PC or hard drive, remove the files from the camera by erasing the files from the glasses storage disk.

8.LED indicator status:

Status	Green LED	Blue LED	Red LED
Power on	Stay on	Stay on 3 secs then flash	Off
Power off	Stay on 1 sec then off	Stay on 1 sec then off	Off
Recording	Stay on	Flash once per sec	Off
Without TF card	Stay on 30 sec then off	Stay on 3 sec then off	Off
card is full	Stay on 5 sec then off	Stay on 5 sec then off	/
Low battery	Flash 20 sec then off	Flash 10 sec then off	Off
Charging	Stay off	Off	Stay on
Fully charged	Stay on	Off	Off

9.PC/Laptop System requirements:

- CPU must be at least Pentium 2.0Ghz Dual-core or above;
- Operation system: MAC10.7/Windows XP or above;
- 4GB free hard disk memory or above;
- 2GB RAM or above;
- Graphic displayer minimum 512M memory

10. Specification sheet:

Resolution	736*480P@30fps
Pixels	1 Megapixels
Power supply	Embedded 550mAh Li-ion Battery
Power duration	About 150 minutes
Power Consumption	<0.6W
Memory	Support Max high speed 32GB TF Card (CLASS 10 or above is required)
Photographing Angle	63 degree
Video Format	M-JPEG
Working temp	-5°C-40°C
Storage temp	-20°C-60°C
USB	2.0 (HS)
Player	KM Player;Quick Time;Real Player;Window Media Player
Operating System	Win7,Windows XP,MacOS 10.7 or above

11.Warranty Information

POV Action Video Cameras warrants to the end-user customer of POV Action Video Cameras products, this limited 90 day warranty statement, that the product if purchased new and operated in the United States or Canada, conforms to the manufacturer's specifications and will be free from defects in workmanship and materials for a period of 90 days from the date of original purchase. For warranty service, you must provide proof of date of the original purchase. Should your POV Action Video Cameras product prove defective during the warranty period, please complete the Return Authorization request on www.povactionvideo.com and please include the following information: