

Serial or Model Number
Date of Original Purchase
Contact Name
Address (City, St, Zip)
Phone Number
Email Address
Description of problem with the product

POV Action Video Cameras is a Blackbird Products Group brand.



www.blackbirdproducts.com

The consumer is responsible for all costs (shipping, insurance, travel time, etc.) in getting the product returned to POV Action Video Cameras. POV Action Video Cameras will, at its option, repair or replace on an exchange basis the defective unit, without charge for parts or labor. When warranty service involves the exchange of the product or of a part, the item replaced becomes POV Action Video Cameras property. The replacement unit may be new or refurbished to the POV Action Video Cameras high standard of quality; and at our option, the replacement may be another model of like kind and quality. POV Action Video Cameras' liability for replacement unit of the covered product will not exceed the original retail selling price of the covered product. Exchanged or replacement products or parts assume the remaining warranty period of the product covered by this limited warranty.

FULL HD 1080P Eyewear Video Recorder



PRO50 Series



USER MANUAL

32GB TF Card (not included)	H.264 Video format	120° Wide angle	1080P@30 720P@60 fps
--	------------------------------	---------------------------	--

1.What's included:

Eyewear Video Recorder
USB Cable
Carry case
Cleaning cloth
User manual



2.Charging



Fully charge the battery before first use. The charging steps are as follows:

A. Please use the provided cable to connect the camera to a powered USB port or a power socket for charging. The Red LED indicator stays on while the camera is charging, the Red LED indicator will turn off once the camera is fully charged.

3.Operation Instruction

A. Button Instruction

With only one Power ON/OFF button and one Reset button, the operation of this device is easy and convenient, the Button instructions as follows,

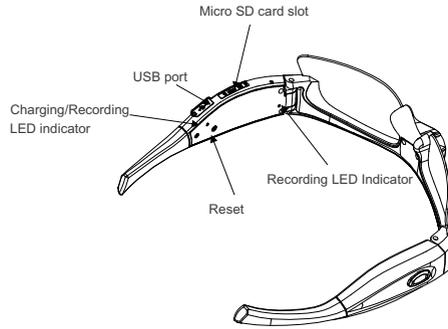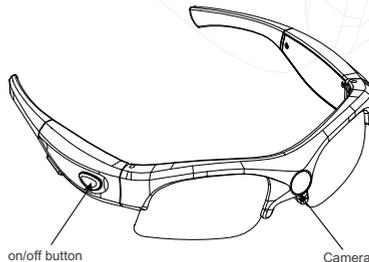

4.Power on & Start Recording:

To start the device, press the On/Off/Record button for 2 seconds, the blue LED light will flash, you will hear 4 beeps, and then the device starts recording.

5.Power off & stop Recording:

Press the On/off/Record button for 2 seconds, you will hear 1 continuous beep sound, the device will save data and power off automatically.

6.Reset Button

If the camera is unresponsive push the RESET button and then restart the camera.

7.Data Transmission(File Download):

- Ensure your camera is in "power off" status with memory card still in the camera.
- Connect the camera with PC via USB 2.0 port using the provided cable.
- When prompted, select to download files from camera to PC or personal hard drive.
- To review files, locate and open the DCIM folder.
- Files can then be saved to the PC or personal hard drive.
- When finished saving the files to your PC or hard drive, remove the files from the camera by erasing the files from the glasses storage disk.

8.System Requirements

- CPU must be at least 2.0GHz Dual-core above
- Operating system: Window 8, Windows 7, Windows XP, Mac OS 10.7 or above

9.Trouble Shooting

Symptom	Possible reason	Solution
Won't start recording	Low battery	Recharge battery
	Device is Frozen	Push Reset Button
Computer won't recognize	USB Cable is defective	Replace new cable
	USB driver aren't running properly	Reset/Reboot computer
Data not saving	Memory is full	Delete unwanted files
Power off after Start	Low battery	Recharge battery
	Memory is full	Delete unwanted files

10. Specification :

Product Size	180x165x47mm(unfolded)
USB	2.0 (HS)
Physical weight	63g
Resolution	1920x1080P@30fps 1280x720P@60fps
Power supply	Embedded 550mAh Li-ion Battery
Video Format	H.264
Image sensor	CMOS sensor
Power duration	about 70 minutes
Memory	Support Max high speed 32 GB TF Card
Power Consumption	<1.5W
Working temp	-5°C~40°C
Storage temp	-20°C - 60°C
FOV	120 degree
Color of lenses	Different color of lenses available (not included)
Player	QuickTime, KM Player, Windows Media Player, RealPlayer etc
Operating System	Win8, Win7, Windows XP, Mac OS 10.7 or above

11.Warranty Information

POV Action Video Cameras warrants to the end-user customer of POV Action Video Cameras products, this limited 90 day warranty statement, that the product if purchased new and operated in the United States or Canada, conforms to the manufacturer's specifications and will be free from defects in workmanship and materials for a period of 90 days from the date of original purchase. For warranty service, you must provide proof of date of the original purchase. Should your POV Action Video Cameras product prove defective during the warranty period, please complete the Return Authorization request on www.povactionvideo.com and please include the following information: